


jebao®

捷寶

Wireless Controller for Wave Maker User's Manual

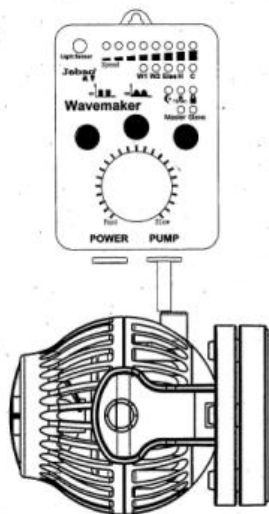

and models: OW-10、OW-25、OW-40、OW-50

Company: Jebao Co.Ltd
 Address: Tongmao Industrial Park, Dongsheng Town, Zhongshan city,
 Guangdong Pro. China
 Phone: +86-760-28136719/20/21
 Email: info@jebao.com
 Fax: +86-760-28136725
 Website: www.jebao.com

Jebao wave makers are well designed as a good equipment to stimulate the natural sea environment by high technology, which offers a natural environment for different sea livings in the fish tank or in the pond. Before assembling and operating correctly, please read the manual carefully.

In case of printing error, we apologize for the inconvenience caused!

I. Function Overview

- 1、Unique control system allows to wave of different types and multiple function, which can achieve different wave patterns as desired.
- 2、Wireless controllers allow synchronize operation among wave makers. One main controller can remote control the sub-controllers
- 3、Low voltage DC electronic pump with variable frequency provides a safe environment for user.
- 4、Easy operation to achieve the multiple sea movings.
- 5、Flow direction can be adjusted by different modes needed.
- 6、Large range of voltage input(AC100~240V 50/60Hz) allows to operate in various power system and prevent the impact on waves.

II. Assembly Notice

- 1、Suitable for most sizes of the fish tank, the tank thickness of less than 15mm would be better.
 - 2、Accessories: wireless controller, adaptor, power cable, double side adhesive tape, user's manual.
 - 3、Pump assembly: Take away the magnet at the back of the pump basket, locate the pump in the center of the fish tank inside and suck it closely by the rubber pad and shift the magnet slant to the same position on the outside wall. Take care of your fingers to be clamped because of the strong magnetism of magnet.
 - 4、Peel off the protection paper on the double-side adhesive sticker and paste in the center of back of controller. Peel off the other protection paper on the other side of and paste the controller on the fish tank, as shown in fig.1.
- This action can be omitted if the controller is not aimed to be stuck on water tank.

5、Connect the pump with the 3-pin connection wire. Insert adaptor plug to the controller and connect AC wire adaptor

6、If you need to make the wave pump for the 3D rotation function, please cut off two ears on the pump body, as follows, if you do not need, you can remove this step: (Just for OW-50)

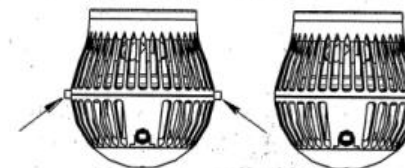


Fig 1: assembly and operation

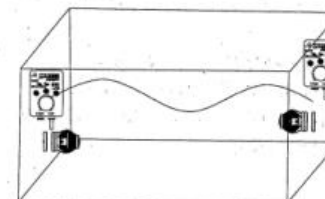


Fig. 1

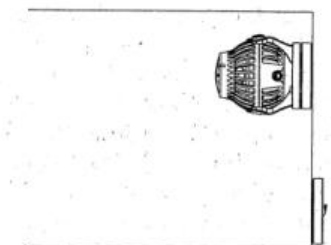


Fig.2

o wave makers are well designed as a good equipment to the natural sea environment by high technology, which offers environment for different sea livings in the fish tank or in the fore assembling and operating correctly , please read the arefully.

ase of printing error, we apologize for the inconvenience

ion Overview

lique control system allows to wave of different types and multiple ction, which can achieve different wave patterns as desired. ireless controllers allow synchronize operation among wave makers. One in controller can remote control the sub-controllers w voltage DC electronic pump with variable frequency provides a safe roment for user. sy operation to achieve the multiple sea movings. w direction can be adjusted by different modes needed. rge range of voltage input(AC100~240V 50/60Hz) allows to operate in ous power system and prevent the impact on waves.

mbly Notice

table for most sizes of the fish tank, the tank thickness of less than 15mm etter. ssies: wireless controller, adaptor, power cable, double side adhesive tape, ual. np assembly: Take away the magnet at the back of the pump basket, locate n the center of the fish tank inside ad suck it closely by the rubber pad and agnet slant to the same position on the outside wall. Take care of your e clamped because of the strong magnetism of magnet. el off the protection paper on the double-side adhesive sticker and paste in of back of controller. Peer off the other protection paper on the other side of he controller on the fish tank, as shown in fig.1. ction can be omitted if the controller is not aimed to be stucked on water

wave patterns among one or more pumps at the same time. As the volum of water in tank is different from the capacity of the tank, wave period needed to be adjusted by switching the knob. The wave is biggest when wave length turn to be same as the length of tank; Increase the wave length by switching the knob in clockwise, and reduce in anti clockwise.

Tips: You should switch the knob gradually and notice the wave pattern in a certain period after each adjustment.Press “SPEED/FEED”to adjust the flow rate.

W2: Sine Mode

One or more pumps can operate at the same time in this mode. The power various between 30%-100% and the regulation looks like a sine curve.

Else: Random Mode

One or more pumps can operate at the same time. It is a random mode as the power of pump is changing to a random data all the time without regulation.

H: Flow Mode

One or more pumps can operate at the same time. In constant flow. Flow rate can be adjusted by “SPEED/FEED”

C: Shift to flow mode

Two pumps are needed to be operated at the same time, when they shift wave and flow in cycles. P1 work, P2 stop;P2 work, P1 stop;P1 work, P2 stop. and cycles like this. Cycle period (1s-1min) can by adjusted by switching the knob and adjust the flow rate by pressing SPEED/FEED

Night Function: Enter into Night Mode by long press-down MODE/NIGHT” button until yellow “NIGHT” indicator lights. It works normally during day time and enter into NIGHT mode automatically when it’s dark, when the water flows at the least speed. Quit the mode by long press down”NIGHT” button until the yellow indicator dims.

FEED Function: Long press down “SPEED/FEED” button until the blue indicator light, and the pump stops working and allow fish to eat for 10 min. and back to normal mode after that. If need to return back to work during feeding, just long press down the SPEED/FEED button until the “10min”indicator dims.

Knob Locking Function: Long press the Wi-Le/LOCK button until the red LOCK indicator light, which shows the setting is locked. Wave patterns and shift time is fixed without change. It prevents the wave pattern and time to be changed if adjust the knob or button on no purpose

IV. Warnings


- No water operation to ensure the performance

- Select a dry place to locate the controller to prevent water splashed on it.
- Be careful when assemble the magnet, better to shift parallel the pad close to the outside wall of fish tank to prevent breaking the fish tank.
- Never disassemble the controller and adaptor without professional guidance.


V. Maintance

- Clean the controller regular to ensure good performance
- Rub the controller surface with dry cloth if there’re any water to prevent water drip into controller
- Sweep the waste in the pump by rotating the basket in anti clockwise to open and lock in clockwise direction.
- Use soft cloth to rub the blade and clean the dirts in the pump
- This product is indoor use only, never submerged in the water to cause unnecessary loss.


Appendix: PUMP LOCATING

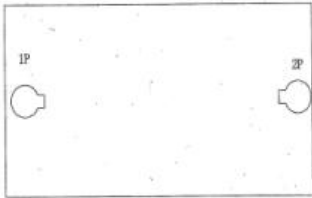

Ref.1

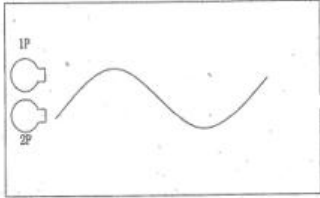


Ref.2

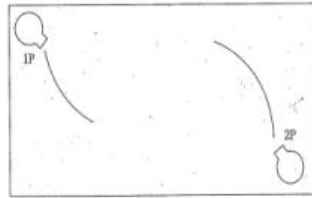

1

Ref.3

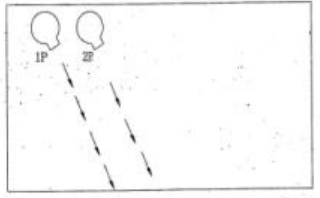

Ref.4